

ASSY - INSTRUCTIONS FOR ARMATURE REPLACEMENT

Place Spacer Between Bearing and Pinion.
Assemble to Gear Case and Check For Free
Rotation Before Completing Assembly of Tool.
If Servicing Models 1684 or 1700, Remove
Bearing Retainer Plate and Do Not Use Spacer.

