

NOTE: Parts are no longer available for this tool.


The manual will continue on the next page.

## Parts List for No's. L1910, L1940, L2910, Form A172F Dated 6/80 E.D. 8/80

## P1910, P1940 & P2910 HIGH SPEED AIR GRINDER

SIOUX

[Ser. No's. Starting With "J", "K" & "L"]

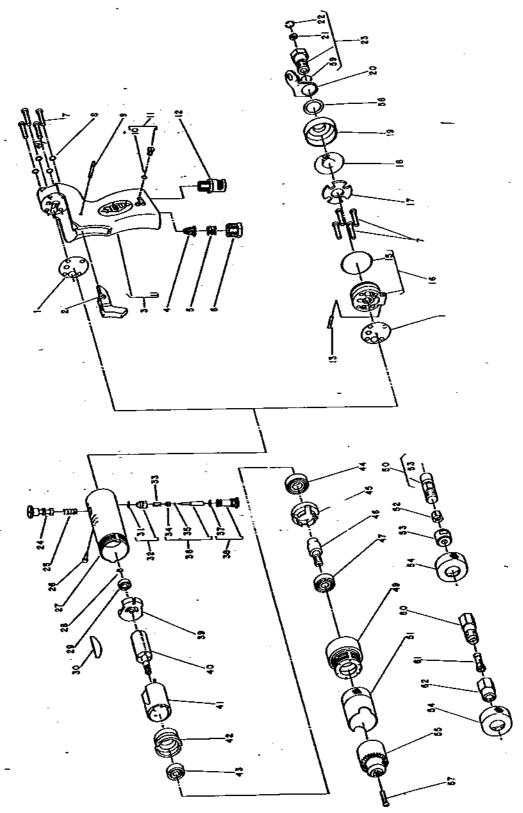

Furnish Catalog, Serial and Model Number When Ordering Parts

## Parts List for No's. L1910, L1940, L2910, P1910, P1940 & P2910 HIGH SPEED AIR GRINDER

[Serial Starting With "J", "K" & "L"]

					(
Fig-	Part		Fig-	Part	
ure	No.	Name	ure	No.	Name
1.	14734	Gasket	36.	43462	Assy.—Valve
2.	33599	Trigger	37.	14291	Ring—"0"
3.	33602	Handle 👡	38.	43508	Assy.—Valve Seat & "O" Ring
4.	33993	Screen—Air	39.	13161	Plate—Upper End
5.	21417		40.	44511	Rotor (Reversible)
6.	44100	Bushing		44513	Rotor (Single Rotation, Right Hand)
7.	07140		41.	33738	Assy.—Cylinder & Pins
8.	09724		ŀ		(L2910 & P2910)
9.	30251	Pin		33740	Assy.—Cylinder & Pins (L1910, L1940,
10.	14369	Ring—''O''			P1910 & P1940)
11.	43553		42.	13173	Plate—Lower End
12.	43543		43.	10220	Bearing—Ball
13.		Pin—Roll	44.	10239	Bearing—Ball
14.	25988	Lever	45.	44089	Spacer
15.	14313	Ring—''0''	46.	44090	Spindle-Chuck (L1910, L2910, P1910 & P2910)
16.	53945	Assy.—End Cap & "O" Ring		54525	Spindle—Chuck (L1940 & P1940)
	000 10	(Incl. Fig. 23)	47.	10240	Bearing—Ball
17.	14764	Felt	49.	54424	Case—Gear
18.	30470	Screen	50.		Assy.—Collet Chuck & Nut
19.	14125	Deflector	00.		(L1940, P1940) (Up to Ser. "L")
20.	35192	Bail		30445	Wrench—1/2" Open End
21.	30463	Screen			Wrench—5/8" Open End
22.	21541	Ring—Retainer	51.		Shield—Chuck
23.	43154	Assy.—Adaptor & Screen (Ser. No's.	52.		Collet—.198"250" (L1940, P1940) (Up to Ser. "L")
	10101	Up To "K")	02.		Collet146"198" (L1940, P1940) (Up to Ser. "L")
	53942	Assy.—Adaptor & Screen (Incl. Fig. 59)			Collet
	000 12	(Ser. "K")	53.	21093	Nut-Collet (L1940, P1940) (Up To Ser. "L")
24.	44426	Spool—Valve (Rev. Only)	54.		Ring—Grip (L1940)
		(Non Locking)	55.	21077	Chuck
	44316	Spool—Valve (Rev. Only) (Locking)			Key—Chuck
<b>25</b> .	21427	Spring (Rev. Only)	57.		Screw
26.	06502	Screw—Retaining (Rev. Only)	58.	35260	Washer
27.	43456	Housing (Reversible)	59.		Ring—''0''
	44666	Housing (Single Rotation, Right Hand)	60.	21096	Body-Collet (L1940 & P1940) (Ser "l")
28.	21491	Ring—Retaining	61.	44440	Collet-1/4" (L1940 & P1940) (Ser. "L")
29.	•	Bearing—Ball		44523	Collet-3/16" (L1940 & P1940) (Ser. "L")
30.	33737	Vane—Rotor (Set of 4)		44522	Collet-1/8" (L1940 & P1940) (Ser. "L")
31.	14394	Ring—"O"	62.	21097	Nut-Collet (L1940 & P1940) (Ser. "L")
	43457	Accy — Chand Control & "O" Ding		30465	Wrench-9/16" Open End (Ser. "L")
33.	21429	Assy.—Speed Control & "O" Ring		30466	Wrench-11/16" Open End (Ser. "L")
	14350	Spring Valve	COM		IANDLE ASSY.
34. 25	25957		CON		
35.	20901	Washer		33637	
				43464	Assy.—Lever Handle Complete

Furnish Catalog, Serial and Model Number When Ordering Parts



This pdf incorporates the following model numbers:

L1910, L1940, L2910, P1910, P1940, P2910