

NOTE: Parts are no longer available for this tool.

The manual will continue on the next page.



TOOLS

Parts List for No. 518

HORIZONTAL AIR CONE WHEEL GRINDER

(SERIAL NO.'S STARTING WITH "B", "C" & "D")

Furnish Catalog, Serial and Model Number When Ordering Parts

Fig- ure	Part No.	Name	Fig- ure	Part No.	Name
1	33736	Screen	37	34996	Body—Governor
2	33843	Ass'm.—Bushing & Retainer	38	43273	Spindle—Governor
3	21396	Spring	39	30452	Pin—Roll
4	10294	Ball—Steel	40	44037	Spacer—Gov. Weight (4)*
5	14344	Seat—Throttle Valve	41	11517	Weight—Gov. (2)*
6	08232	Screw—1/4" (4)*	42	30362	Pin—Roll (2)*
7	09750	Washer—Lock 1/4" (8)*	43	13164	Nut-Governor Adjusting
8	21512	Ring—Retaining	44	21390	Spring—Gov.
9	21418	. •	45	10175	Bearing—Ball
	44011	Spring—Tapered	46	33734	Plate—Top End
10 11	33735	Retainer—Seat	47	12755	Housing
12		Handle—Lever Throttle	48	34984	Cylinder
13	44042 35009	Pin	49	34985	Rotor
15 15		Lever—Throttle	50	10195	
	14039	Button—Throttle	51	44023	Bearing—Ball
16	14349	Ring—"0"	52	34992	Spindle—Rotor
17	33848	Ass'm.—Plunger & "O" Ring	53		Key—Rotor
18	14369	Ring—"0"	1	33851	Plate—Front End
19	44253	Oiler Screw & "O" Ring	54	33837	Vane—Rotor (Set of 4)
20	44141	Pivot	55	34991	Key-Cylinder
21	54377	Plate—Wear	56	44021	Coupling (2)*
22	53434	Ass'm.—Lever & Cam Kit (Incl's. Fig.	57	14033	Pin—Drive (12)*
		21) (Ser. No's. Starting with "B")	58	30356	Fitting—Grease
	53446	Ass'm.—Lever & Cam (Ser. No's	59	12348	Housing—Spindle
		Starting with "C")	60	22633	Spindle—Tool
23	44251	Plunger—Valve .	62	10126	Bearing—Ball
24	07186	Screw#10	63	35152	Washer—Wave (3)*
25	33994	Handle—Thumb Throttle	64	54064	Spacer
26	14345	Ring—"0"	65	54063	Cap
27	34994	Valve—Governor (Lever & Thumb Handle)	66	44026	Cover—Housing
	44539	Valve—Governor (Grip Handle)	67	44024	Nut-Cover Lock
28	30355	Pin	68	07002	Screw—Safety
29	13167	Body—Governor Valve	69	20366	Plate—Name
30	21385	Spring—Valve	70	09900	Rivet—Steel (2)*
31	35010	Retainer—Spring	71	08272	Screw 1/4"-28 x 31/2" (4)*
32	14799	Gasket (Lever & Thumb Handle)			[Up to Ser. No. "D"]
	14745	Gasket (Grip Handle)		08296	Screw 1/4"-20 x 31/2" (4)*
33	53694	Housing—Governor (Lever & Thumb Handle)			[Ser. "D" & Up]
		Includes Fig. 71 [(4) 1/4"-20 x 31/2"] & Fig. 7 (4)	72	44435	Flange—Inside
	53696	Housing—Governor (Grip Handle)	74	44158	Plunger—Valve
		Includes Fig. 71 [(4) 1/4"-20 x 31/2"] & Fig. 7 (4)	75	33909	Ass'm.—Grip Handle
34	14739	Gasket	76	33944	Ass'm.—Trigger
35	44544	Connector—Gov. (Lever & Thumb Handle)	77	30347	Pin
	44547	Connector—Gov. (Grip Handle)	78	30381	Plug-Pipe
36	43372	Ass'm.—Governor	79	53086	Set—Grip Handle (Includes Fig. 7(4) 26 thru 35, 38
& 71(4) [With 14"-20 Thd.]					

53412 Kit to convert Grinder to Lever Throttle Handle From Thumb Throttle
*Order Quantity As Needed


SIOUX TGOLS INC.



TOOLS

Parts List for No. 518 HORIZONTAL AIR CONE WHEEL GRINDER

(SERIAL NO'S. STARTING WITH "B", "C" & "D")

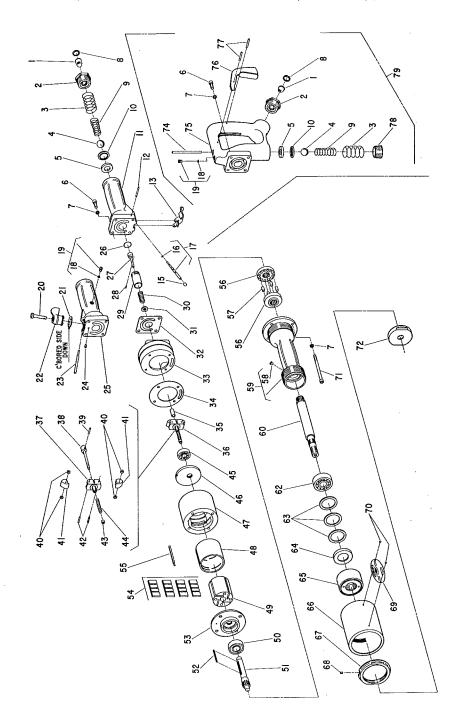

This pdf incorporates the following model numbers:

518