

NOTE: Parts are no longer available for this tool.


The manual will continue on the next page.



2901 FLOYD BOULEVARD ■ SIOUX CITY, IOWA 51102 ■

## Parts List for No's. 508, 509, 513 and 514 HORIZONTAL AIR GRINDER

(508, 513 Ser. No's. Starting With "B" & "C") (509, 514 Ser. No's. Starting With "C")

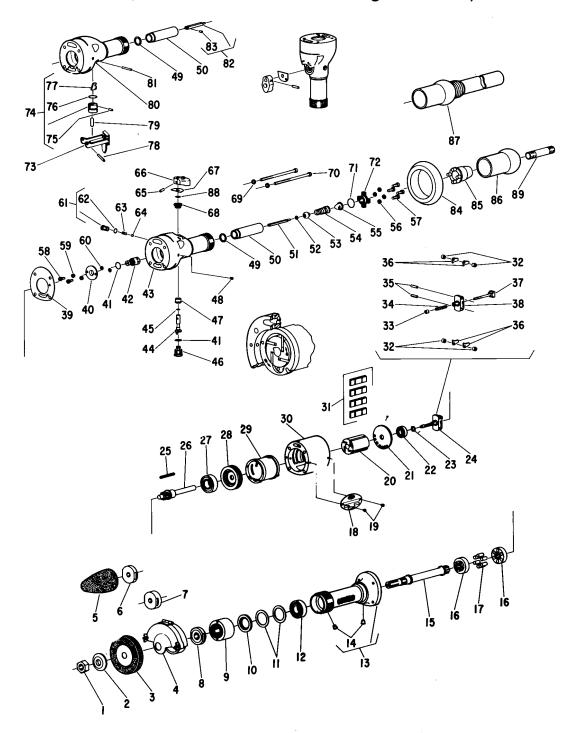

Furnish Catalog, Serial and Model Number When Ordering Parts

## Parts List for No's. 508, 509, 513 and 514 HORIZONTAL AIR GRINDER

(508, 513 Ser. No's. Starting With "B" & "C") (509, 514 Ser. No's. Starting With "C")

## Furnish Catalog, Serial and Model Number When Ordering Parts

Fig- ure	Part No.	Name	Fig- ure	Part No.	Name
1	09622	Nut-Hex. 1/2"-13 (508, 509)	46	44389	Stop (508, 513)
-	09600	Nut—Hex. 3/8"-24 (508, 509)	47	44390	Bushing—Inner (508, 513)
2	44464	Flange—Outside (For 1/2" Spindle)	48	30375	Fitting—Grease
	44700	(508, 509)	49	14755	Gasket—Inlet
	44708	Flange—Outside (For 3/8" Spindle)	50	44391	Sleeve-Valve
3	598	(508, 509) Wheel—Grinding (1/2" Hole) (508,	51	44434	Rod—Valve (508, 513)
	550	509)	52 53	35119 14372	Washer Valve
4	2311	Guard (508, 509)	54	21413	Spring—Valve [509, 514 (All)] [508,
5	599	Wheel—Grinding (513, 514)			513 (Ser. No's. Starting Wwith "B")]
6	54117	Flange—Inside (513, 514)		41285	Spring—Valve [508, 513 (Ser. No's.
7	554	Adaptor (508, 509) [Sp. for use on			Starting With "C")]
		tools equipped with 3/8"-24 th'd. to convert to cone grinder]	55 56	33993	Screen
8	54116	Flange—Inside (508, 509)	56 57	09712 06573	Washer—Lock (4) Screw (4)
9	54114	Сар	58	06325	Screw (2)
10	54115	Spacer	59	09704	Washer—Lock (2)
11	35275	Washer—Wave (2)	60	14750	Retainer—Screw (2)
12 13	10254 53100	Bearing—Ball	<b>*</b> 61	43232	Assy.—Detent Screw & "O" Ring
14	30356	Assy.—Spindle Support Fitting—Grease (2)	#60	14001	(508, 513)
15	22637	Spindle—Tool 1/2"-13 (508, 509)	*62 63	14291 21432	Ring—"O" (508, 513) Spring—Detent (508, 513) (Ser. No's.
	22647	Spindle—Tool [Sp. 3/8"-24 th'd.]	ų.	21732	Starting With "B")
		(508, 509)	64	10902	Ball—Steel (508, 513) (Ser. No's.
1.0	22638	Spindle—Tool (513, 514)			Starting With "B")
16 17	4446U	Coupling (2)	65	34694	Pin—Trigger (508, 513)
	20367	Pin—Drive (6) Plate—Name (508)	66	53443	Trigger Conversion Kit (Momentary
10	20373	Plate—Name (500)			Lock) (508, 513) (Includes Fig. 54,
	20375	PlateName (513)			66 & 67) (Ser. No's. Starting With "B")
	20376	Plate—Name (514)		53440	Trigger [508, 513 (Ser. No's. Starting
19	06000	Screw (2)			With "C")]
20 21	44220	Rotor End Plate—Rear	67	35118	Washer (508, 513) (Ser. No's. Starting
22	10241	Bearing—Ball		95994	With "B")
		Washer—Wave		33334	Plate—Wear (508, 513) (Ser. No's. Starting With "C")
24	43672	Assy.—Gov.	68	44378	Bushing—Outter (508, 513)
25	44219	Key-Rotor		09724	Washer—Lock (4)
26 27	22636	Spindle—Rotor		07129	Screw (4)
28		Bearing—Ball End Plate—Front	71	14281	Ring—"Ó"
		Assy Cylinder & Pin	72 73	44388 63163	Cap—Inlet
30	12276	Housing (Front Exhaust)	74	43323	Ass'y—Lever Lock (509, 514) Assy.—Plunger Guide & Bell Crank
	12291	Housing (Rear Exhaust)	• •		(509, 514)
31	33997	Vane-Rotor (Set of 4)	75	34819	Pin (509, 514)
$\frac{32}{33}$	13183	Spacer - Gov. Weight (4)		14309	Ring—"O" (509, 514)
	21411	Nut- Gov. Adjusting Spring—Gov. (Red)		35123	Crank—Bell (509, 514)
		PinRoll (2)	78 79	30459 40142	Pin (509, 514)
36	35069	Weight—Gov. (4)		12298	Pin (509, 514) Handle (Lever Throttle) (509, 514)
37	43666	Assy.—Brg. Support & Spindle	81	30219	Pin (509, 514)
38	44222	Frame—Gov.	82	44476	Rod—Valve (509, 514)
3 <b>9</b>	14751	Gasket (Front Exhaust)	83	30273	Pin— Roll (509, 514)
4 -	14756	Gasket (Rear Exhaust)	84 95	14275	ProtectorRubber
	44245	Retainer—Gov. Valve	85 86	04207 14063	Cover—Hose (Front Exhaust) Cover—Handle (Front Exhaust)
41	14312	Ring—"O" (2)	87	1361	Cover—Handle (Rear Exhaust)
42	43664	Assy.—Gov. Valve	88	14291	Ring—"O" (508, 513) (Ser. No's.
43	43228	Handle—Thumb Throttle (Incl. Fig.			Starting With "B")
1.4	12050	47, 48 & 68) (508, 513)	89	40022	Nipple—Pipe
44 45	43253 14323	Assy.—Crank (508, 513)		63169	Ass'y Lever Handle Kit (Includes
73	17343	Ring—"O" (508, 513) (Ser. No's. Starting With "B")			Figs. 49 & 50, 73 thru 83)
		(==== -, = -, = -, = -, = -, = -, = -, =			

\*Used on all 508 & 513 units up to & including some early Models Serial No's, starting with "C".



This pdf incorporates the following model numbers:

508, 509, 513, 514