


NOTE: Parts are no longer available for this tool.

The manual will continue on the next page.

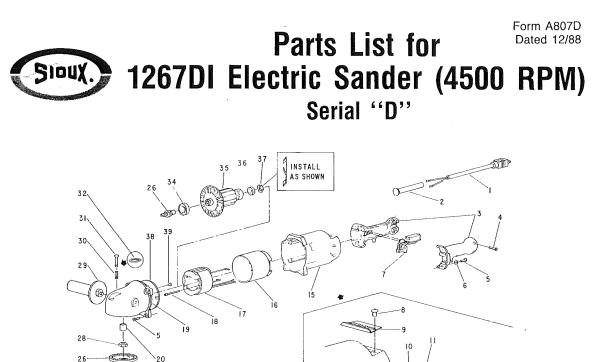

		23			
Fig ure	Part No.	Name	Fig ure	Part No.	Name
1	18442	Cord w/Terminals	20	10023	Bearing-
2	04303	Relief—Strain	21	21819	Ring—R
3	53786	Assy.—Handle	22	64183	Spindle-
4	06657	Screw—Phil. Pan Hd.	23	524	Nut-Lo
		(#8-32x1 1/8) (3)*	24	10244	Bearing
5	07248	Screw—Torx Pan Hd. (#10-32x3/4) (12)*	25	12675	Support- Assy.
6	35234	Washer (4)*	26	19740	Assy.—S
7	18235	Switch			Pinion
8	06662	Screw—Pan Hd. (3-32x1/4) (2)*	28	09693	Nut-Lo
9	35830	Cover—Inspection Hole		21820	Ring—Re
10	04016	Bushing—Lead Insulating			(Not S
11	07000	Screw—Soc. Hd. Cup Pt. Set (2)* (Torque to 9-10 in. lbs.)		41331	–Washer (Not S
12	63421	Assy.—Brush Holder	29	63349	Assy.—8
		W/Insulating Sleeve (2)*	30	41332	Spring
13	18031	Brush (Set of 2)	31	54991	Pin—Spi
14	18120	Cap—Brush Holder (2)*	32	21491	Ring—Re
15	12674	Housing [Incl's. Fig's. 10, 11 (2), 12 (2), 5 (8), 8 (2)]	34 35	10290 28937	Bearing– Armature
16	04027	Sleeve—Field Insulating		28649	Armature
17	28887	Field (Incl's. 14733 (2)]		04321	Fan
18	06610	Screw—Field (#8-32x2 1/2) (2)*	36	10931	Bearing-
	14733	Washer (2)*	37	41333-1	Finger—
19	12677	Čase—Gear [Incl's. Fig's. 20, 30, 31, 32, & 5 (4)]	38 39	35833 07261	Plate Screw—

-Needle Retaining (Bowed) -Tool (Incl's. Fig. 28) ock Ball -Bearing & Bearing (Incl's. Fig's. 24 & 22) Spiral Bevel Gear & n ock (Torque to 55 ft. Lbs. Min) Retaining Shown—Used on Older Models) -Spring (Curved) Shown—Used on Older Models) Side Handle bindle Lock Retaining —Ball re re W/Bearings —Ball -Spring Washer 07261 Screw-Flat Hd. (#10-24x1/2) (2)*

Items Not Shown 20822 Plate—Name

SIOUX

25 24

INSTALL AS SHOWN

22

21

*Order Quantity As Needed

TOOLS INC. 2901 FLOYD BOULEVARD SIOUX CITY, IOWA 51102 This pdf incorporates the following model numbers:

1267DI