


SPV50-MUFF

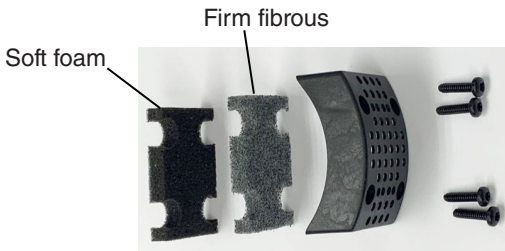

Installation Instructions:

1. Verify foam sequence as shown
2. Position muffler on tool as shown
3. Install (4) provided thread-forming screws
4. Torque to 50 in-lb and verify body is tight to tool

Cleaning Instructions:

1. Clean with mild aqueous-based solvent or soapy water during each tool maintenance service
2. Install with soft-foam material next to tool body

Muffler Position



This pdf incorporates the following model numbers:

SPV50-MUFF